

# HANGING WALL POCKET

Designed by Kevin Kosbab

*Sort your paper goods, whether it be sewing or craft patterns, files, bills, coupons – you name it, there is a place for it. If you're really feeling ambitious, you can even label the pockets for that next level of ultraorganization!*

## MATERIALS

- \* 1 yard of 44/45" or 54/60" fabric (home-decor or heavyweight preferred, but quilting weight will do)
- \* 2 yards of fusible interfacing (only if using quilting-weight fabric)
- \* 1 spool of coordinating thread
- \*  $\frac{5}{8}$  yard of  $\frac{3}{8}$ " twill tape
- \* Alphabet rubber stamps and ink (preferably ink made for fabric)
- \* Fabric or basting glue (optional)
- \* 2 large grommets
- \* Grommet-setting tool (included in many grommet kits) and hammer

*Finished dimensions* – 30" tall  $\times$  13" wide

*Seam allowance* –  $\frac{1}{2}$ " unless otherwise specified

## 1 Measure, Mark, and Cut


Place your fabric in a single layer with wrong side facing up. Measure and mark the following pattern pieces directly on the wrong side of your fabric. Mark three lines across one main body piece every 6", as indicated. Cut out the pieces.

- \* **Main body** 32" tall  $\times$  14" wide (cut 2)
- \* **Pockets** 8" tall  $\times$  14" wide (cut 4)

*If using quilting-weight fabric, also cut from interfacing:*

- \* **Main body** 31" tall  $\times$  13" wide (cut 2)
- \* **Pockets** 7" tall  $\times$  12" wide (cut 4)

Also, cut the twill tape into four 5 $\frac{1}{2}$ " lengths.

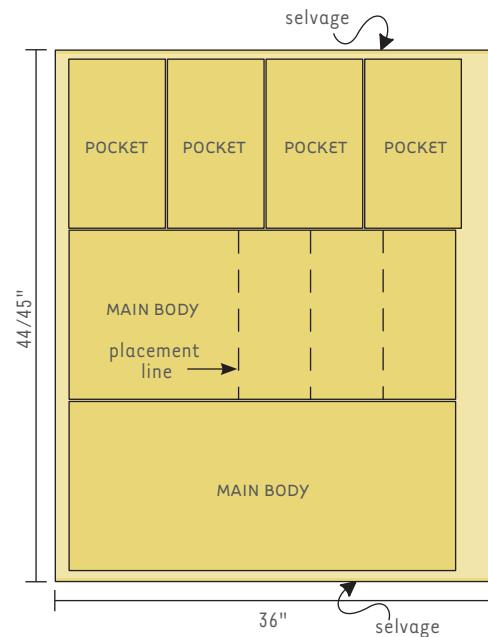

CUTTING LAYOUT

NOTE: Place "tall" dimensions along the grainline of your fabric.